

Engineering Mode Menu

The console has built in maintenance/diagnostic software. Press and hold down the **Start**, **Stop** and **Enter** keys. Keep holding the keys down for about 5 seconds and the Message Center will display Engineering Mode Menu. Press the **Enter** key to access the menu below:

1. Key Test (Will allow you to test all the keys to make sure they are functioning)
2. Display Test (Tests all the display functions)
3. Functions (Press Enter to access settings and Up arrow to scroll)
 - I. Sleep Mode (Turn on to have the console power down automatically after 20 minutes of inactivity)
Default : ON
 - II. Pause Mode (Turn on allow 5 minutes of pause, turn off to have the console pause indefinitely)
 - III. ODO Reset (Resets the odometer)
 - IV. Units (Sets the display to readout in English or Metric display measurements)
Default : Metric
 - V. Beep (Turns off the speaker so no beeping sound is heard)
Default : ON
 - VI. DA Test (Tests the brake resistance)
4. Security (Allows the keypad to be locked to prevent unauthorized use)
Default : OFF

ENGINEERING MODE MENU

Druk op "START"+"STOP"+ "ENTER" tegelijkertijd en houd deze 5 seconden in om in het menu te komen.
Druk op de "ENTER" om in het onderstaande menu te komen:

1. KEY TEST

- testen van alle toetsen

2. DISPLAY TEST

- testen van alle display functies

3. FUNCTIES

- A. SLEEP MODE: indien "ON" gaat de console automatisch uit na 20 minuten bij geen activiteit.
- B. PAUSE MODE: indien "ON" 5 minuten pauze mogelijkheid.
- C. ODO RESET: resetten van de totaal kilometers.
- D. UNITS: selecteren in "METRIC" of "ENGLISH".
- E. BEEP: geluid "ON" of "OFF".
- F. DA TEST: weerstandstest

4. SECURITY

- toetsenblokkering "ON" of "OFF"

